

CHYARRGER



**MC-120**  
**user manual**

# Charging Electronic Devices

1. Plug the USB charging cable into the Pocket Storage CHARGER "OUT" port.
2. Select the appropriate connector tip and attach it to the USB charging cable.



3. Plug the correct connector tip into the power jack of the electronic device then the GREEN LED will light up.



*\*This photo is for reference only.*

4. The GREEN LED light will go off to indicate the Pocket Storage CHARGER power is drained.



# Charge the Pocket Storage CHARGER

## Getting Started:

- Pocket Storage CHARGER
- USB Retractable Charging Cable
- Mini USB connector tip



1. Connect mini USB connector tip into USB Charging cable.
2. Then plug the mini USB connector tip into Pocket Storage CHARGER "In" port.



3. Plug the USB Charging cable male end into the USB port of a compatible PC to start charging.
4. When the Pocket Storage CHARGER is charging, the RED LED will light up.



5. When the Pocket Storage CHARGER is fully charged, the RED LED light will go off then you can unplug the Pocket Storage CHARGER.



# Technical & Support

- Size** • 71 (L) x 47 (W) x 10 (D) mm
  - Weight** • Approx. 50g
  - Technical** • Built-in Li-ion battery
  - 2 LED indicator lights
  - Accessories** • USB retractable charging cable
  - Connector tips x 7
- For any 5V DC devices or a variety of mobile phones/gaming devices or digital cameras.

## Power Specification

Input Voltage : USB DC INPUT 5V

Output Power : USB DC 5V

Output Current : 500 mA

Electric Capacity : 1200 mAh

## Safety Features

- Safety and protection
- Charge protection
- Over current protection
- Short circuit protection
- Over-charge protection
- Over-discharge protection
- High temperature resistance

## Pocket Storage CHARGER does not charge a connected device?

- Check the connection between the Pocket Storage CHARGER and the device.
- The voltage of the device may not correspond with that of the Pocket Storage CHARGER.
- Check that you are using the correct connector tip.

## Safety Advice!

- To avoid risk of electric shock, unplug the Pocket Storage CHARGER from the DC power source and disconnect the devices first before cleaning or when not in use.
- Do NOT shake or drop the Pocket Storage CHARGER
- Keep the Pocket Storage CHARGER away from children.

***Thank for your purchase and for using the  
Pocket Storage CHARGER***